

NOVODOSER

Liquid Nitrogen Dosing
BEVERAGE | FOOD | PERSONAL CARE | CHEMICAL



Dosing for a Greener World

www.novodoser.com

TABLE OF CONTENT

NovoDoser® Applications	3
Ergonomic Features And Benefits	5
NovoDoser® Selection Guide	6
Controller Selection Guide	8
NovoDoser® UltraClean	9
NovoDoser® Aseptic	9
System Solutions	10
Dewar Change Over	11
Phase Separator	12
Cryogenic Transfer Hoses	14
Worldwide Sales and Service	15



NovoDoser® Applications

How it works

The dosing process involves supplying LN2 to the NovoDoser® through a vacuum-insulated pipe/hose, directing it into the dosing head. A sensor detects the presence of a container and sends pulses to the controller. Upon receiving these signals, the controller activates the dosing head to dispense the required amount of LN2 into the container.

As the LN2 droplets enter the container, they rapidly evaporate and expand by approximately 700 times, converting into gaseous N2. This process effectively fills the container's headspace with inert N2 gas, displacing residual oxygen and achieving the desired pressure.

Why Liquid Nitrogen Dosing?

PRESSURIZATION

- PET and PP bottles
- Aluminum cans
- Aluminum bottles
- Non-carbonated drinks



Enhanced Container Rigidity: Strengthen bottles or cans to eliminate paneling issues, particularly during the hot filling process.

Container Light weighting: Reduce packaging costs and minimize the environmental carbon footprint by using lighter packaging materials.



NovoDoser® Applications

NITRO-INFUSED BEVERAGE

- Beer
- Coffee
- Tea

Nitro-Infused Beverage: Infusing the beverage with nitrogen creates a luxurious, thick, and creamy texture, enhancing the mouthfeel and flavor of the drink, along with a beautiful cascade of nitrogen bubbles in your glass.



INERTING

- Nuts
- Wine
- Fruit Juice
- Vegetable Oil
- Vitamin Drink
- Sauces
- Snack
- Automobile Oil
- Beer
- Tea
- Coffee Seed



Oxygen Exclusion: Minimize residual oxygen in the product's headspace to prevent oxidation and maintain product quality.

Extended Product Shelf Life: Incorporating N₂ gas in packaging significantly prolongs the product's shelf life.

Alternative to Traditional Modified Atmosphere Packaging (MAP): Using inert gas, such as N₂, offers a more efficient and effective solution than traditional inert gas flushing for preserving product freshness.





NOVODOSER

Liquid Nitrogen Dosing

Ergonomic Features And Benefits


- **Frost-free Nozzle** – Self-generating GN2 for dosing head blanketing
- **Consistent Container Pressure** – Delivers accurate dosing with $\pm 2\%$ precision
- **Lowest LN2 Consumption** – Discrete dosing for speeds up to 2000* containers per minute
- **Lowest LN2 Losses** – Proprietary vacuum insulation with lowest heat leak of 0.1 LPH
- **Minimized Product Splash** – Lowest dose pressure in its class, 0.3 psi
- **Sub-cooled LN2** – Ensures constant LN2 density for accurate dosing
- **Corrosion Resistant** – Optional 316L material grade for the Doser body
- **Highest Hygiene Design** – All external surface features rounded corners and sloped design for easy wash-down
- **Lowest Maintenance** – Ultra long life cycle dosing valve (> 60 million cycles); Superior to IP65 rated sensors & electrical cables
- **Ease of Installation** – Compact size and flexible dosing head for easy installation in limited space
- **Applications Flexibility** – Compatible with GentleDose and micro-dose technology for hot fill, powder, and granular applications
- **Multi-lingual HMI** – Available in English, Spanish, Chinese, etc.
- **5 Years Vacuum Warranty** – Lowest cost of ownership

*Controller Specific

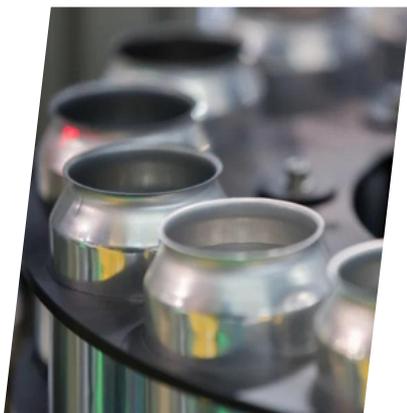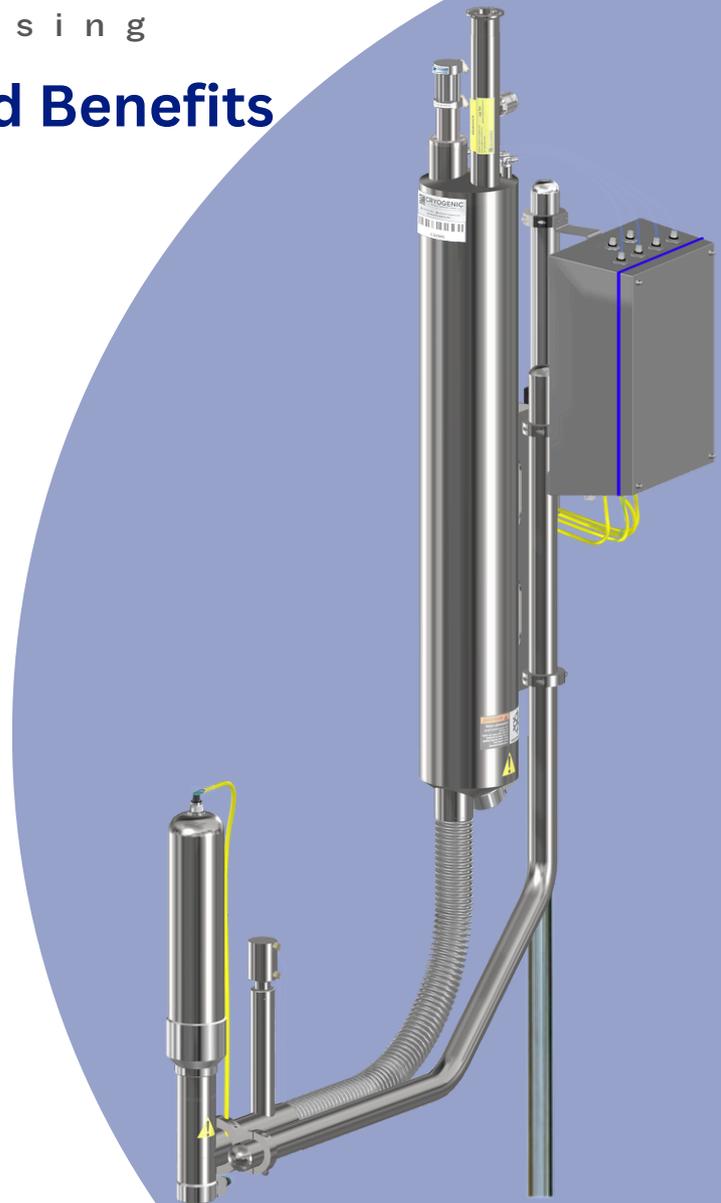



Selection Guide *Specifications*

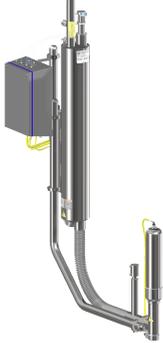Series	L	H	Q
NovoDoser Body			
Material	Stainless Steel 300 Series ^①		
Head Pressure	0.3 psi	0.3 - 0.55 psi	0.5 - 1.05 psi
Dose Accuracy	± 3%	± 2%	± 2%
Dose Volume, mg/dose	10 to 1400	5 to 1400	5 to 1400
Subcooling	Yes	Yes	Yes
Nozzle Blanketing	Self-Generated N2	Self-Generated N2	Self-Generated N2
Steady State Consumption	< 0.026 gal / hour (< 0.1 liter / hour)	< 0.029 gal / hour (< 0.11 liter / hour)	< 0.035 gal / hour (< 0.13 liter / hour)
Body Dimension	33" H x 5" W (850 x 129 mm)	42" H x 5" W (1070 x 129 mm)	58" H x 5" W (1474 x 129 mm)
Dosing Head Actuator ^④	Electric (EA) & Pneumatic (HS)	Pneumatic (HS) & Servo (ES)	Servo (ES)
Dosing Head Arm Reach	18" (457 mm)	18" (457 mm)	31" (788 mm)
Weight	30 lbs (14 kg)	35 lbs (16 kg)	44 lbs (19 kg)
Liquid Nitrogen Supply	≤ 100 psi (≤ 6.8 bar)	≤ 100 psi (≤ 6.8 bar)	≤ 100 psi (≤ 6.8 bar)
Gaseous Nitrogen Supply	100 psi (6.8 bar)	100 psi (6.8 bar)	100 psi (6.8 bar)
Electrical	110-220 VAC	110-220 VAC	110-220 VAC

Note:

① SS316/316L for external material

② **NovoDoser Aseptic** - Sterilization / Sanitization through steam or chemicals

③ To operate with Phase Separator

④ Electric (EA) Actuator: 13.8" (351.5 mm) H x 2.3" (57 mm) W; Pneumatic (HS) Actuator: 14" (354 mm) H x 2.5" (63.5 mm) W; Servo (ES) Actuator: 13.8" (351.5 mm) H x 2.3" (57 mm) W

⑤ NovoDoser **UltraClean / Aseptic Dosing Actuator** - Customizable according to filler manufacturers

NOVODOSER


Liquid Nitrogen Dosing

P (Petite)	C (UltraClean)	A (Aseptic) ^②
		
Stainless Steel 300 Series ^①	SS316/316L	
0.4 - 3 psi ^③	0.3 psi	0.4 psi
± 2%	± 2%	± 2%
10 to 1400	5 to 1400	5 to 1400
Yes	Yes	Yes
Self-Generate N2	Self-Generate N2	Self-Generate N2
< 0.03 gal (0.11 liter) / hour	< 0.03 gal (0.11 liter) / hour	< 0.12 gal (0.40 liter) / hour
13"H x 2.5"W (340 x 63mm)	Customize to Filler Machine	Customize to Filler Machine
Electric (EA) & Std. Pneumatic (BIMBA)	UltraClean ^⑤	Aseptic ^⑤
3.7" (93mm)	Customize to Filler Machine	Customize to Filler Machine
6 lbs (3kg)	Customize to Filler Machine	Customize to Filler Machine
≤ 22 psi (≤ 1.5 bar) 100 psi (6.8 bar) 110 - 220 VAC	≤ 100 psi (≤ 6.8 bar) 100 psi (6.8 bar) 110 - 220 VAC	≤ 100 psi (≤ 6.8 bar) 100 psi (6.8 bar) 110 - 220 VAC



Controller Selection Guide

Controller *Specifications*

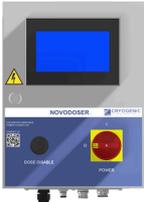Controller Model	250FD	500SC	1000DSC	2000DSC
				
PLC Platform	Siemens S7-1200	Siemens S7-1200	Siemens S7-1200	Siemens S7-1200
HMI (LCD touch screen)	4.3" Color	7.0" Color	7.0" Color	10.0" Color
Max. Discrete Dosing	500 CPM	1000 CPM	2000 CPM	2000 CPM
Dosing Head Actuator	Electric (EA)	Electric (EA) / Pneumatic (HS)	Pneumatic (HS) / Servo (ES)	Servo (ES)
Dynamic Dose	✓			
Fixed Delay	✓	✓	✓	✓
Dose Timing Synchronization		✓	✓	✓
Dose Volume Synchronization		✓	✓	✓
Encoder Compatibility			✓	✓
Thermo-Purging:				
- Quick System Purging				
- Rapid Nozzle Defrosting	✓	✓	✓	✓
- CIP Protection				
Nozzle Pre-Cooling	Manual	Auto	Auto	Auto
Filler Command Signal	✓	✓	✓	✓
Filler Signal Exchange			✓	✓
Modbus RTU User Interface	✓	✓	✓	✓
Mobile Remote Monitoring (LAN)				✓
Smart Maintenance				✓
Recipe Storage	5	5	12	20
Certifications	CE	CE	CE	CE



NovoDoser® Aseptic

Dosing with Ultra-hygienic Confidence



Features and Benefits

Aseptic LN₂ Dosing

Ultimate Aseptic Doser that delivers **sterile LN₂ dosing** with advanced **SIP (Steam-in-Place)** functionality, achieving *log 9 purity* for high-sterility applications in food & beverage, pharma and biotech

Chemo-Sanitization

The nozzle is sanitizable during filler **CIP (Clean-in-Place)** interval using customizable recipes and duration settings, helping maintain ultra-high hygienic performance

CIP Protection

Prevents nozzle freeze up during or after filler CIP or wash down, by keeping moisture out of the dosing head. Built to handle high-pressure washdowns and harsh chemicals for longer service life and less downtime

Continuous Low Pressure Dosing

Supports uninterrupted, low-pressure LN₂ dosing for smooth, efficient, and consistent packaging pressure or inerting

Precise Dosage Control

± 2% dosing accuracy to ensure packaging pressure stability and consistent product quality

Process Monitoring with Data Logging, History Records and Alarms

Advanced process monitoring with data logging system ensure compliance to GAMP 5 requirements. The real time monitoring alerts operators for system faults via on-screen text messages, buzzer and light beacon alarms

Advanced HMI Control

Features high performance Siemens PLC S7-1200 and a 10" color touchscreen, designed with intuitive display for easy setup and process monitoring

NovoDoser® UltraClean

A new generation of NovoDoser® UltraClean with a frost-free nozzle, corrosion-resistant 316L material construction, and hygienic wash-down design in compliance with stringent ultra-clean bottling line requirements.

Specifications

- Continuous dose mode with option of discrete dose
- Controller with Siemens S7-1200 PLC platform
- NEMA 4X IP65 stainless steel enclosure
- HMI comes with a TFT color touch screen
- Accurate dose weight: ±2%
- Smart maintenance allows users to plan the maintenance schedule
- Direct LN₂ feed pressure up to 100 psi (6.8 bar)
- ModBus user interface
- Alarm log to assist system troubleshooting and performance monitoring
- Recipe storage for 10 recipes or more
- 316L material construction for higher corrosion resistance
- Hygienic Dosing Head wash-down design, IP65 rated



System Solutions

Benefits to Customer


Single Source, Single Responsibility: End-to-end solutions covering system design, manufacturing, installation, testing, and commissioning.

System Level Engineering Approach: Our system level engineering approach ensures minimal heat loss, reduced cooling waste, lowest LN₂ consumption, shorter project lead times, and fastest ROI - delivering unmatched efficiency and cost savings.


Seamless Safety & Performance Integration: Incorporates critical safety functions and performance monitoring, e.g. O₂ monitoring, emergency shutdown systems, thermo, pressure, and flow monitoring.

Effortless FMCS Integration: Seamless FMCS integration using standard MODBUS TCP/IP communication protocols.

Dewar or Liquid Cylinder supply System

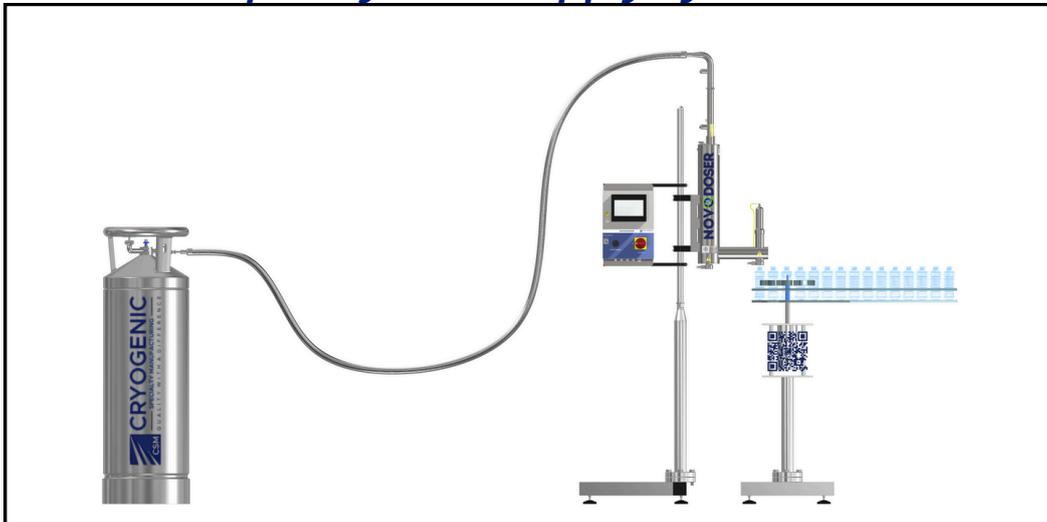

Centralized Bulk LN2 supply System

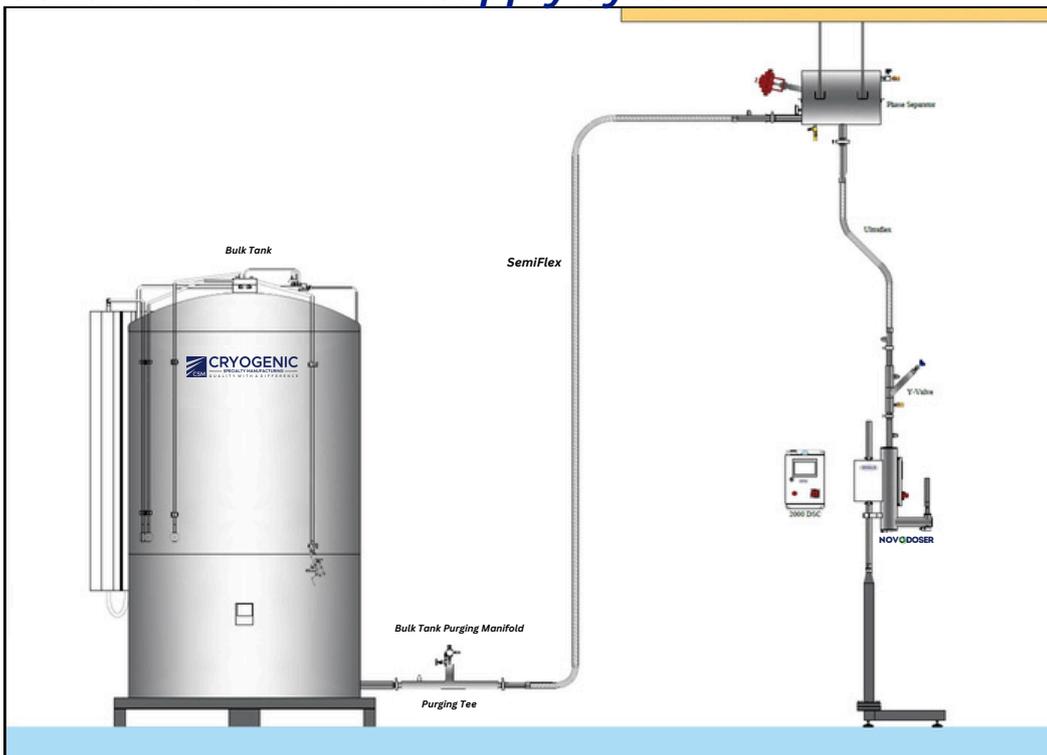

Dewar Changeover


How it works?

An uninterrupted liquid nitrogen supply with LGC is achievable using a dewar changeover system. The station consists of two sides: one active supply and one standby. When the active supply is depleted, the operator simply switches over to the standby tank manually. For unattended operation, an automatic changeover option is available.


CSM's dewar changeover system is fully vacuum-insulated, ensuring exceptionally low heat loss—at least 20 times lower than foam-insulated stations. This results in minimal liquid boil-off, maintaining consistent liquid supply quality at the point of use. Reduced boil-off leads to significant LN2 savings, enabling equipment capital payback within at least six months.

Features and Benefits

- Minimal liquid supply downtime for higher productivity
- Available in 1x1, 2x2, 4x4 liquid cylinder configurations
- Frost-free and condensation-free operation with vacuum insulation system
- Prevent premature liquid cylinder changeouts through proper monitoring
- Compact size enables ease of installation in limited spaces

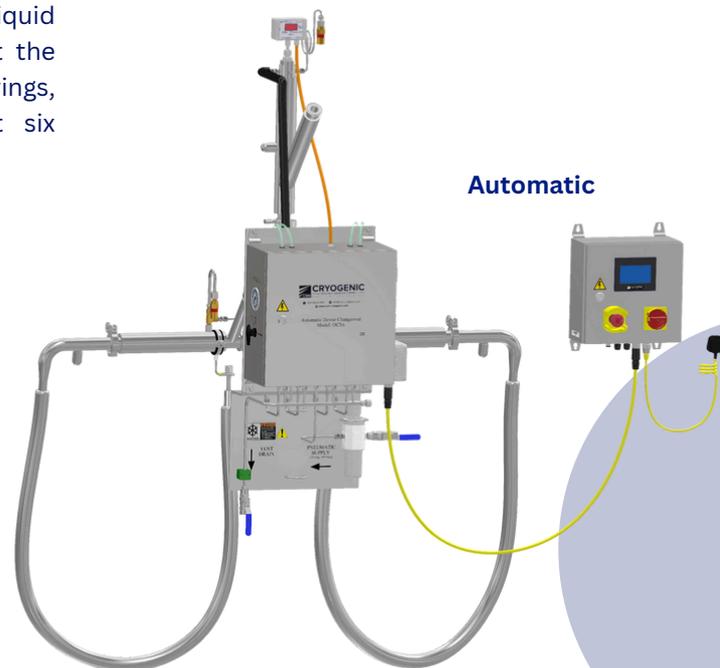

Typical Dewar Changeover System® for LN2 Supply

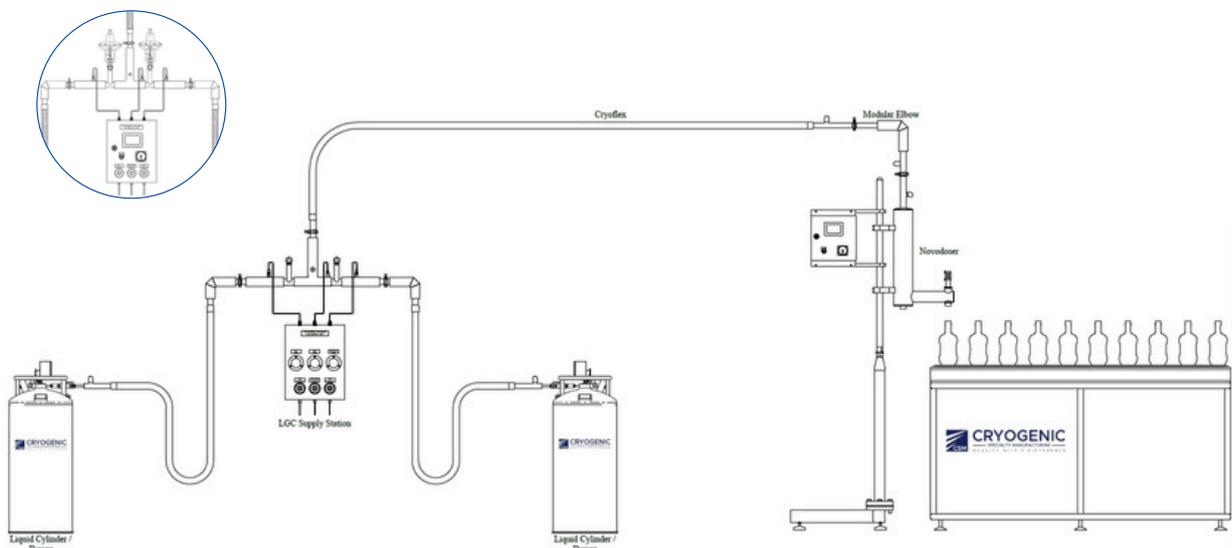


Phase Separator


Atmospheric Pressure

The atmospheric-type Phase Separator is primarily used in specialized applications that demand extremely high-quality, low-pressure liquid nitrogen. CSM's Phase Separator is a vacuum-insulated reservoir holding tank for liquid nitrogen, equipped with a differential pressure level control system that operates with a proportional inlet valve.

The Phase Separator is continuously filled with liquid nitrogen under atmospheric conditions. Typical applications include direct feed to a LN2 doser or a closed-loop liquid nitrogen circulation system, typically found in MBE (Molecular Beam Epitaxy) system applications.

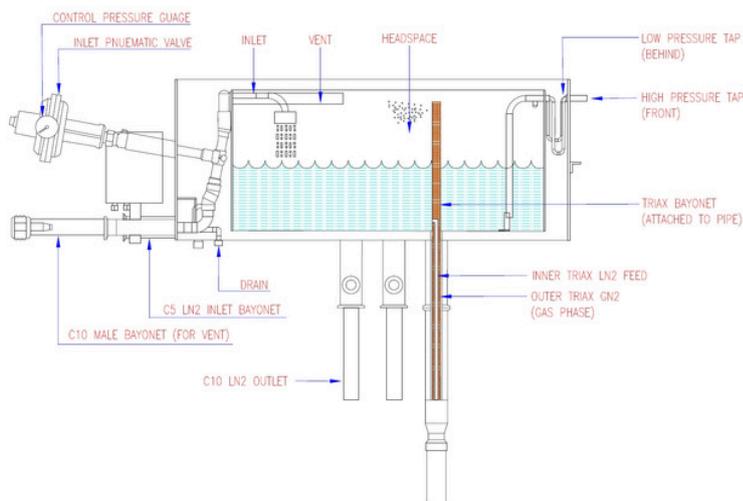

Model	H1	H2	L1	L2	L3
C22	16.4" (417mm)	5.5" (140mm)	21.6" (549mm)	14.2" (361mm)	24.4" (620mm)
C46	16.4" (417mm)	5.5" (140mm)	21.6" (549mm)	14.2" (361mm)	41.7" (1060mm)

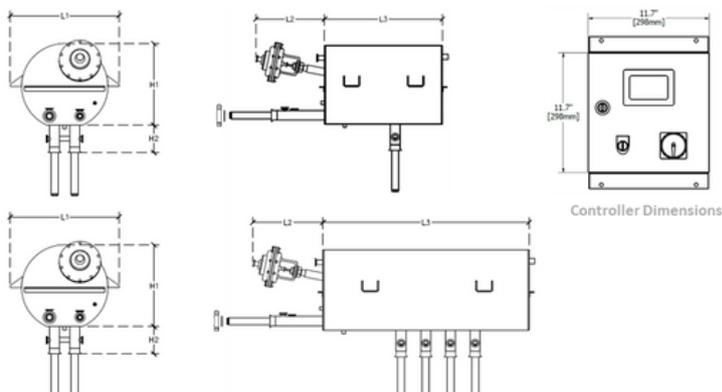

Features and Benefits

- Differential pressure controls and a proportional inlet valve help to maintain a constant liquid level within +/- 5%
- Provides a ready supply of vapor free, pure liquid nitrogen for critical applications
- Available in 22 and 46-liter operating capacities, with bottom outlets ranging from 2 to 12 outlets. Higher capacities for custom application are available.
- Equipped with specially designed universal outlet connections, allowing compatibility with both liquid feed Triax pipes and vapor return Coax pipes. This feature enhances installation flexibility in multiple pairs of closed-loop piping systems.

Cryogenic Transfer Hoses

Semi-Flex Vacuum Insulated Transfer Hoses



Semi-Flex



Semi-Flex is a semi-rigid, bendable pipe with optimal flexibility, making it suitable for long-distance piping system applications as an alternative to traditional rigid piping. Its lightweight stainless steel construction reduces cool-down losses to an absolute minimum. Available in sizes of DN16 (1/2"), DN25 (1"), DN32 (1.25"), and lengths ranging from 6m to 18m.


- Semi-Flex can be coiled for shipment by air freight, eliminating the need for expensive logistics.
- Tees, elbows, bayonets, and valves can be incorporated with Semi-Flex transfer hoses for a customized LN2 piping system application.
- Selected hoses are kept in stock for immediate delivery.
- Super insulation and proprietary chemical getters ensure long-lasting vacuum integrity.
- Each hose is evacuated (10^{-6} torr), helium leak checked (1×10^{-9} std cc/sec), and liquid nitrogen cold-shock tested before shipping.
- Vacuum insulation eliminates frost, ice, and related safety hazards.

Semi-Flex Specifications

Model	SF16	SF25	SF32
Inner Diameter	DN 16 5/8" (16.2 mm)	DN 25 1" (25.1 mm)	DN 32 1 1/4" (34.2 mm)
Outer Diameter	DN 40 (52.1 mm)	DN 50 (62.8 mm)	DN 65 (81.2 mm)
Steady State Heat Leak	1.4 btu/hr/ft (1.3 watts/m)	1.5 btu/hr/ft (1.4 watts/m)	1.6 btu/hr/ft (1.5 watts/m)
Bayonet Heat Leak	4.0 btu/hr (1.2 watts)	8.1 btu/hr (2.4 watts)	8.1 btu/hr (2.4 watts)
Max. Operating Pressure	200 psig (13.8 bar)	200 psig (13.8 bar)	200 psig (13.8 bar)
Weight	1.0 lbs/ft (1.4 kg/m)	1.3 lbs/ft (1.9 kg/m)	3.0 lbs/ft (4.5 kg/m)
Min. Bend Radius (Static)	12" (30 cm)	16" (40 cm)	18" (45 cm)
Vacuum Insulation Type	Static or Dynamic Vacuum		
Maximum Length	Single Spool 59 ft (18.00 m)		
Protective Outer Covering	RFB - Regular Flex Braid		
Material Construction	Stainless Steel Series 300		
Standard Testing	Dimensional Check He leak checked 1×10^{-9} cc/s		
Optional	Pneumatic pressure test, Vacuum retention testing, LN2 cold shock, pre-material certs., X-ray, ASME B31.3 certification, CFOS cleaning for O2 services		

CSM Cryogenic Transfer Hoses

Hoses Selection Guide

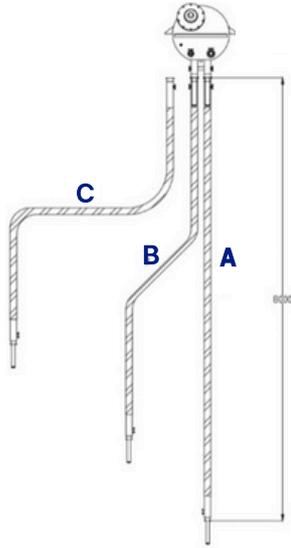

Installation Method	Hose Type	
	Triax-Flex	Ultra-Flex
A	✓	✗
B	✓	✓
C	✓	✗

Hose Type	ID	OD	Bending Radius
Triax-Flex	DN16	DN40	300mm.
Ultra-Flex	DN8	DN25	152mm.
	DN12	DN32	203mm.

Ultra-Flex transfer hose is an ultra-flexible, vacuum-insulated LN2 transfer hose with high flexibility and the lowest dynamic bend radius among all cryogenic hoses on the market. Due to its lightweight stainless steel construction, cool-down loss is reduced to an absolute minimum. Ultra-Flex hoses are protected by a tough, anti-kink stainless steel spiral wrap outer covering. Its non-wire braid prevents potential operator injuries caused by sharp wires found in traditional braided sleeves.

Typical hoses are manufactured with pipe thread ends or female flare 1/2" JIC/CGA fittings, or C5 bayonets. These hoses are used in a wide variety of applications, including tool connections with portable dewars supplying LN2 to test handlers, LN2 dosers, or any moving reservoirs, custom OEM applications.



Ultra-Flex


Triax-Flex® transfer hose, when used with an atmospheric Phase Separator system, delivers liquid nitrogen (LN2) in pure liquid form at atmospheric pressure. This system eliminates two-phase flow to use points by continuously venting gaseous vapor to the atmosphere through the phase separator. By separating and venting vapor before liquid delivery, only sub-cooled LN2 is supplied to each use point via gravity. Triax-Flex® is commonly used in applications where single-phase liquid is critical to the production process, such as MBE, LN2 dosers, cryopreservation, or any process requiring pure LN2 supply.

Triax-Flex® is available in static or dynamic vacuum insulation. The dynamic version requires an external pump to continuously evacuate its vacuum annular space, maintaining insulation integrity. Both static and dynamic systems feature Triax female bayonet connections, elbows, tees, valves, or custom connections (e.g., A5, A10, TAL) to the point of use.



Triax-Flex

RELATED PRODUCT:

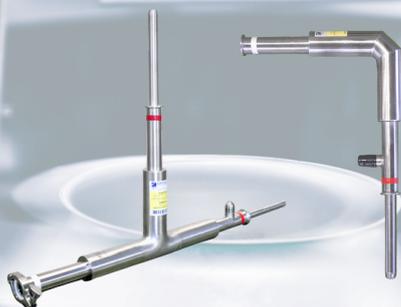

Modular Fittings



Modular Valves

Worldwide Sales & Service



Cryogas Sdn. Bhd.

10, Jalan PPU 3A, 47150 Puchong, Selangor, Malaysia.
Tel: +60-3 8051 0982; Fax: +60-3 8051 0913
E-mail: info@cryogas.asia



Cryogas Pte. Ltd.

531A Upper Cross Street #04-95, Hong Lim Complex, Singapore 051531.
Tel: +65-8280 8803
E-mail: info@cryogas.asia



Cryogas Shanghai Co., Ltd.

RM 1122, No. 55 Jilong Road, Waigaoqiao Free Trade Zone, Pudong, Shanghai, People's Republic of China 200131.
Tel: +86-21 6106 1937 / +86-21 6106 1939; Fax: +86-21 6106 1938
E-mail: info@cryogas.asia



Cryogas (Thailand) Co. Ltd.

168/29, M.12 Bangkaeo, Banhphil, Samuthprakan 10540, Thailand.
Tel: +66-81 469 5615 / +66-81 939 9788
E-mail: info@cryogas.asia



Cryogas (Vietnam) Co. Ltd.

E53, D9 Street, D2D Residential Area, Thong Nhat Ward, Bien Hoa City, Dong Nai.
Tel: +84-251 730 1956
E-mail: info@cryogas.asia



Taiwan Puritic Corp.

33, Guangfu S. Rd., Hukou Township, Hsinchu County, 303036 Taiwan (ROC).
Tel: +886-3 597 3168; Fax: +886-3 597 3166
E-mail: service_tamila@tptc.com.tw



Rong Maws Enterprise Co. Ltd.

2F., No. 16-5, Guide St., Datong Dist., Taipei 10343, Taiwan (ROC).
Tel: +886-2 2558 4618 / +886-2 2558 4041; Fax: 02-2559-7681
E-mail: temyvenus2012@gmail.com



Spheretech Packaging India Pvt. Ltd.

201, Gold Crest, Business Park, Opp. Shreyas Cinema, LBS marg, Ghatkopar (W), 400086 Mumbai.
Tel: +91-98330 27390
E-mail: sales@spheretech.biz / info@spheretech.biz



TPM Mühendislik

Küçükyalı İş Merkezi C Blok No:6 Küçükyalı / Maltepe, 34852 Istanbul, Turkey.
Tel: +90-532 275 32 22
E-mail: sermetyuce@tpm.com.tr



MaxLine SARL

Main Street, Roumieh, Lebanon.
Tel: +961-81 13 1380
E-mail: abdallah.haddad@maxline-lb.com



PHIR Technologies Ltd.

1005 Richards Road Suite P, Hartland, WI 53029, United States of America.
Tel: +1-262 751 3073; Fax: +1-262 367 5091
E-mail: sales@phirtechnologies.com



Alfa Pack Solutions

Hacienda Caceres 4, Col., Urbi Hacienda Balboa, Cuautitlán Izcalli, Estado de México, C.P. 54740, México.
Tel: +52(55)-2870 5700
E-mail: eric.ortiz@alfapacksolutions.com



Vargas Energy And Engineering S.A.S

Calle 152 & 58-50, Bogota Colombia.
Tel: +757-350 5833887
E-mail: frank.vargas@varen.energy



BBULL Technology

Rua Viseu, 148, Chácaras Reunidas, São José dos Campos - São Paulo, 12238-550, Brazil.
Tel: +55-12 33089840
E-mail: comercial@brbull.com.br



Makro Technology LLC

Office 607, Room. 20, App. 36, Floor 6, Building 1, Irkutskaya Street 11, 107497 Moscow, Russia.
Tel: +7(495)-6426846 / +7(495)-7447434
E-mail: lobanov@makro-technology.ru



Enoekspert Ltd.

4000 Plovdiv, Bulgaria. /
Atinska 10, 1020 Skopje, Macedonia.
Tel: +389-70 206 783
E-mail: info@enoekspert.com



Cryogenic Systems BV

Kossenland19, 1834 BJ Sint Pancras, Netherlands.
Tel: +31-6 1131 9918
E-mail: josglorie@cryogenicsystems.nl



KTW Technology GmbH

Gleeser Str. 14, 56653 Wehr, Germany.
Tel: +49-2636 807773
E-mail: mk@ktwtechnology.de



Beveratech (PTY) Ltd.

77 Stokery Road, Wellington 7654, PO Box 7089, Paarl 7623, Western Cape, South Africa.
Tel: +27-21 873 0590
E-mail: isabel@beveratech.co.za

FABRUM. Fabrum

128A Waterloo Road, Hornby 8042, Christchurch, New Zealand.
Tel: +64-2 166 1945 / +64-3 982 2810
E-mail: contact@fabrum.nz

Criogenico (Australia) Pty Ltd.

95, Patrick Spireet, Oakleigh East VIC 3166, Australia.
Tel: +61(0)-432388200
E-mail: Mark@criogenico.com.au



● Global Sales & Technical Support



Manufacturing

CSM's 12,000 m² smart factory embodies our commitment to high-efficiency manufacturing and environmental sustainability.

- ✓ Green Manufacturing for sustainability
- ✓ Cutting-Edge Automation for precision and productivity
- ✓ ISO 9001 and 14001 certified

By integrating quality and innovation with sustainability, we deliver superior product performance while minimizing environmental impact!



Cryogenic Specialty Manufacturing Sdn Bhd

No 10, Jalan PPU 3A, 47150 Puchong,

Selangor, Malaysia

Tel : +603-8051 0982

Fax : +603-8051 0913

E-Mail : info@csm-cryogenic.com



PCAT-FB-R26.0, 2 Feb.